


INSTRUCTION TAG MODEL "B" .22 LONG RIFLE

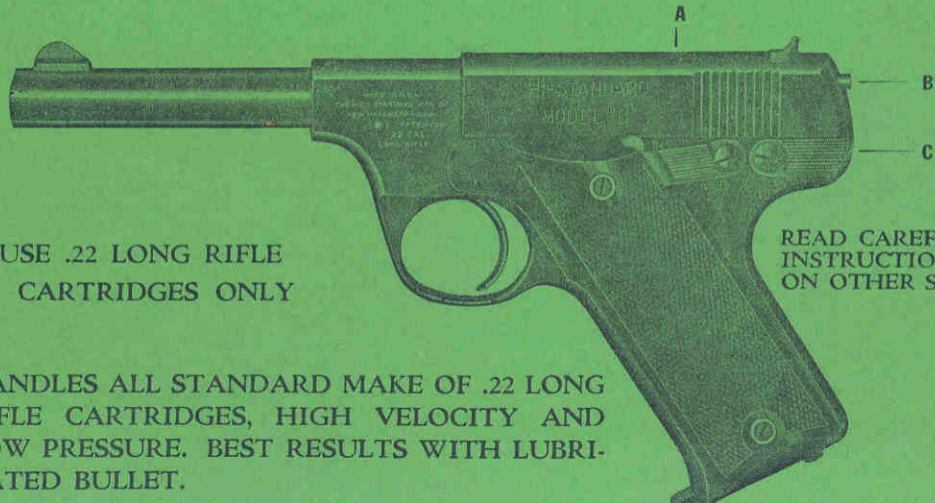

USE .22 LONG RIFLE
CARTRIDGES ONLY

READ CAREFULLY
INSTRUCTIONS
ON OTHER SIDE.

HANDLES ALL STANDARD MAKE OF .22 LONG
RIFLE CARTRIDGES, HIGH VELOCITY AND
LOW PRESSURE. BEST RESULTS WITH LUBRI-
CATED BULLET.



INSTRUCTIONS

TO TAKE DOWN—First cock the hammer by opening sliding bolt "A" and letting it snap forward. Then push in on plunger "B" located at rear end of bolt "A"; at the same time pull down on take-down lever "C" and draw bolt back off frame. Be sure and hold lever "C" down all the way until bolt is removed.

TO RE-ASSEMBLE—Pull down on take-down lever "C" and insert front end of bolt on rear of frame, sliding forward as far as the hammer. Depress hammer and push bolt "A" forward to a closed position. Push in on plunger "B" and take-down lever "C" will snap up into place.

TO OPERATE—Fill magazine with .22 long rifle cartridges and insert in handle. Pull slide "A" as far as it will go, then release it, which allows the slide to carry a cartridge into the barrel, after which all that is necessary is to pull the trigger for each shot.

TO FILL MAGAZINE—Do not force cartridges down through lips at top of magazine. Insert head of cartridge at front of magazine and slide backwards, at same time holding down magazine button so as to relieve pressure of magazine spring.

INSTRUCTIONS

TO TAKE DOWN—First cock the hammer by opening sliding bolt "A" and letting it snap forward. Then push in on plunger "B" located at rear end of bolt "A"; at the same time pull down on take-down lever "C" and draw bolt back off frame. Be sure and hold lever "C" down all the way until bolt is removed.

TO RE-ASSEMBLE—Pull down on take-down lever "C" and insert front end of bolt on rear of frame, sliding forward as far as the hammer. Depress hammer and push bolt "A" forward to a closed position. Push in on plunger "B" and take-down lever "C" will snap up into place.

TO OPERATE—Fill magazine with .22 long rifle cartridges and insert in handle. Pull slide "A" as far as it will go, then release it, which allows the slide to carry a cartridge into the barrel, after which all that is necessary is to pull the trigger for each shot.

TO FILL MAGAZINE—Do not force cartridges down through lips at top of magazine. Insert head of cartridge at front of magazine and slide backwards, at same time holding down magazine button so as to relieve pressure of magazine spring.