


INSTRUCTION TAG
MODELS "A", "D" & "E" .22 LONG RIFLE

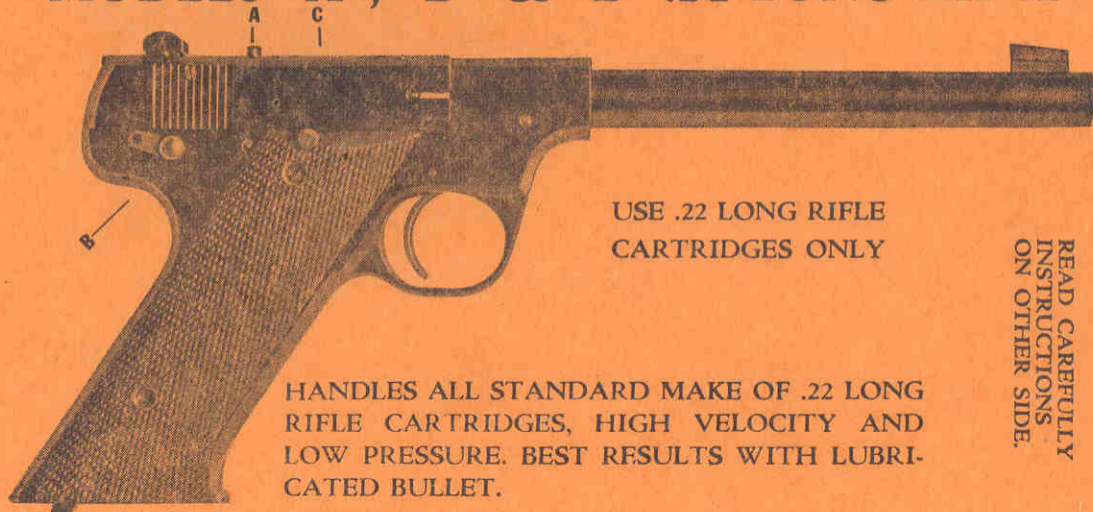

USE .22 LONG RIFLE
CARTRIDGES ONLY

HANDLES ALL STANDARD MAKE OF .22 LONG
RIFLE CARTRIDGES, HIGH VELOCITY AND
LOW PRESSURE. BEST RESULTS WITH LUBRI-
CATED BULLET.

READ CAREFULLY
INSTRUCTIONS
ON OTHER SIDE.

INSTRUCTIONS

AUTOMATIC SLIDE LOCK—C

Located on right hand side of frame at top or stock. Automatically locks slide open when pistol is used as a single shot, and when the last cartridge has been fired from the magazine if pistol is used as an automatic. This slide lock does not operate automatically when magazine is removed, but can be hand operated by pulling slide back as far as it will go, pushing up on knurled head of the latch and then releasing slide. The operation of this slide lock is up and down, and not in and out.

IMPORTANT

Do not attempt at any time to close slide by forcing down on knurled head of latch without first pulling back on slide to relieve tension. Holding in this position push down on latch and release slide.

When using as a single shot leave the magazine in, and pull slide back until it is caught by slide lock. Insert cartridge in barrel, and release slide by hand. If you grip pistol as in firing you will find that the trigger finger comes in contact with the knurled head of the latch at about the middle, and can be used for releasing the slide.

TO FILL MAGAZINE—Do not force cartridges down through lips at top of magazine. Insert head of cartridge at front of magazine and slide backwards, at same time holding down magazine button so as to relieve pressure of magazine spring.

ADJUSTABLE REAR SIGHT

This sight has two lock screws, one at the rear of the slide, and one coming up against this screw from underneath. To adjust, first lock slide open, turn gun over, and the main locking screw will be seen inside of the slide coming up from the bottom. It is the larger of the two screws. Loosen the screw, and then loosen the screw coming in from the back of the slide. This will allow you to move sight base for windage and sight slide for elevation. When correct adjustment is obtained tighten screw at the back of slide, and then the main locking screw underneath.

THE TAKE DOWN action of the High Standard Pistol is simple and no tools are required. Do not use undue force on the take down lock button "A" or the take down lever "B".

1. Remove magazine.
2. Cock the pistol by pulling back the slide as far as it will go. Hold in this position and push down on the small knurled take down lock button "A" on the top of the slide, holding button down until you push the slide forward to a closed position.

The retracting rod and spring is then locked in a compressed position by the flat spring fitted in top of slide underneath and controlled by the take down lock button "A", and should be held in this position when slide is taken off for cleaning. If this recoil rod and spring should slip off and snap back from any cause whatever, it can again be locked in the following manner: With a sharp end tool or nail, push the retracting rod and spring forward as far as it will go. Hold in this position and push down on lock button "A" and release pressure on retracting rod. The front end of the spring will then again rest in the circular slot in the rear end of the retracting rod, holding it in the correct position.

3. Pull down take down lever "B" on the right hand side of frame as far as it will go. Hold in this position and remove slide from frame.

RE-ASSEMBLE—Mount slide on frame depressing the hammer slightly to allow the slide to go over this freely. Push slide forward until it is fully closed. Next grip slide firmly and pull back until action is connected. Then let slide snap forward.