

INSTRUCTIONS

ADJUSTABLE REAR SIGHT

THIS SIGHT IS HELD IN POSITION ON THE REAR OF THE SLIDE BY A BINDING SCREW LOCATED DIRECTLY OVER THE FIRING PIN HOLE. THIS BINDING SCREW IS HELD IN PLACE BY A LOCKING SCREW LOCATED INSIDE REAR OF THE SLIDE.

TO ADJUST SIGHT FOR WINDAGE AND ELEVATION, FIRST LOCK THE SLIDE OPEN. TURN PISTOL OVER AND LOOSEN (DO NOT REMOVE) THE LOCKING SCREW. NEXT, LOOSEN THE BINDING SCREW AND THE SIGHT SHOULD BE FREE TO SHIFT FOR WINDAGE AND BLADE ADJUSTMENT FOR ELEVATION IF NECESSARY.

TO MAKE THE SIGHT SECURE AGAIN, FIRST TIGHTEN THE BINDING SCREW LOCATED DIRECTLY OVER THE FIRING PIN HOLE. NEXT TURN THE PISTOL OVER AGAIN AND TIGHTEN THE LOCKING SCREW.

THE HIGH STANDARD MFG. CORPORATION