

# INSTRUCTIONS

## ADJUSTABLE REAR SIGHT

THIS SIGHT IS MADE SECURE WITH TWO SCREWS, ONE A MAIN LOCKING SCREW LOCATED ON THE INSIDE TOP OF THE SLIDE AND A BINDING SCREW LOCATED ON THE OUTSIDE REAR OF THE SLIDE OVER THE ENTRANCE TO THE FIRING PIN HOLE. TO ADJUST SIGHT, FIRST LOCK THE SLIDE OPEN, TURN PISTOL OVER AND LOOSEN THE MAIN LOCKING SCREW, SECOND LOOSEN THE BINDING SCREW. THE SIGHT IS NOW FREE TO MOVE THE BASE FOR WINDAGE AND THE BLADE FOR ELEVATION. AFTER CORRECT ADJUSTMENT IS OBTAINED THEN TIGHTEN THE BINDING SCREW AND FINALLY THE MAIN LOCKING SCREW.

NOTE: LOOSEN BUT DO NOT REMOVE BINDING SCREW AS IT HAS A DUAL PURPOSE, ALSO USED TO RETAIN THE FIRING PIN IN POSITION.

THE HIGH STANDARD MFG. CORP., NEW HAVEN, CONN.