


# INSTRUCTION TAG MODEL "B" .22 LONG RIFLE

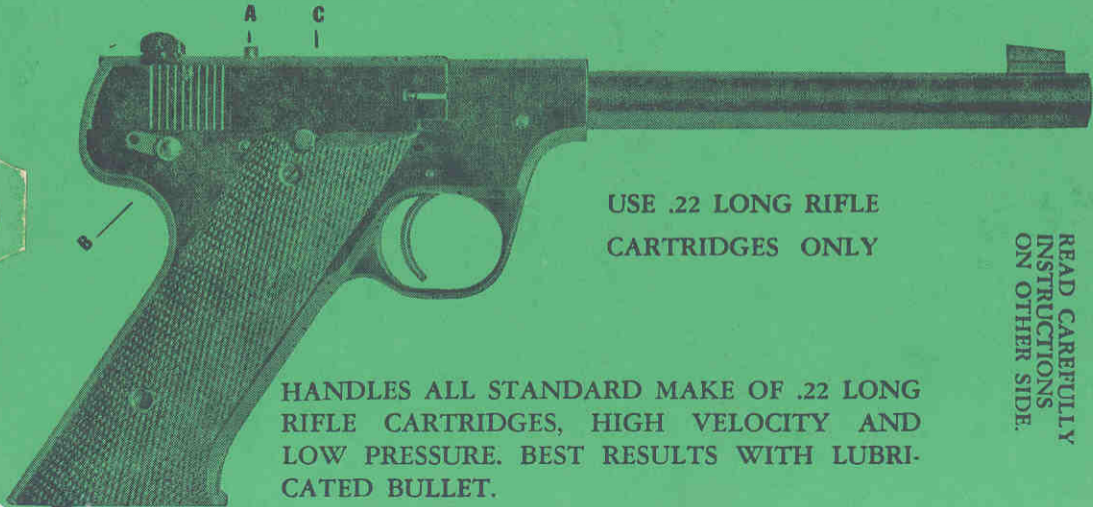

USE .22 LONG RIFLE  
CARTRIDGES ONLY

HANDLES ALL STANDARD MAKE OF .22 LONG  
RIFLE CARTRIDGES, HIGH VELOCITY AND  
LOW PRESSURE. BEST RESULTS WITH LUBRI-  
CATED BULLET.

READ CAREFULLY  
INSTRUCTIONS  
ON OTHER SIDE.



## INSTRUCTIONS

**TO OPERATE**—Fill magazine with .22 long rifle cartridges and insert in handle. Pull slide "A" as far as it will go, then release it, which allows the slide to carry a cartridge into the barrel, after which all that is necessary is to pull the trigger for each shot.

**TO FILL MAGAZINE**—Do not force cartridges down through lips at top of magazine. Insert head of cartridge at front of magazine and slide backwards, at same time holding down magazine buttons so as to relieve pressure of magazine spring.

**THE TAKE DOWN** action of the High Standard Pistol is simple and no tools are required. Do not use undue force on the take down lever "B".

1. Remove magazine.
2. Cock the pistol by pulling back the slide as far as it will go. Hold in this position and press down firmly on the small knurled take down lock button "A" on the top of the slide, holding button down until you push the slide forward to a closed position.

The retracting rod and spring is then locked into a compressed position by the flat spring fitted in top of slide underneath and controlled by the take down lock button "A", and should be held in this position when slide is taken off for cleaning. If this recoil rod and spring should slip off and snap back from any cause whatever, it can again be locked in the following manner: With a sharp end tool or nail, push the retracting rod and spring forward as far as it will go. Hold in this position and push down on lock button "A" and release pressure on retracting rod. The front end of the spring will then again rest in the circular slot in the rear end of the retracting rod, holding it in the correct position.

3. Pull down take down lever "B" on the right hand side of frame as far as it will go. Hold in this position and remove slide from frame.

**RE-ASSEMBLE**—Mount slide on frame depressing the hammer slightly to allow the slide to go over this freely. Push slide forward until it is fully closed. Next grip slide firmly and pull back until action is connected. Then let slide snap forward.

**HIGH STANDARD MFG. CORP.**  
New Haven, Conn., U. S. A.